

# MRX.mountingPlate **AZG Tech**

210192 BGR

## Kurzbedienungsanleitung

### Lieferumfang

Zum Lieferumfang der Baugruppe gehören:

- MRX.mountingPlate,
- 2x Mutter 3/8-16 UNC (für Montage RAM Kugelkopfes m. UNC-Gewinde),
- 4x Linsenkopfschr. M6x10 TX, ISO7380-1, A2 (für Montage RAM Kugelkopf),
- 4x Linsenkopfschr. M4x6 TX, ISO7380-1, A2 (für Montage MRX.pal oder MRX.oce),
- 4x Linsenkopfschr. M4x14 TX, ISO7380-1, A2 (für Montage MRX.planarAntenne),
- 4x Senkkopfschraube M4x6 TX, ISO18581, A2 (für Montage MRX.monitor o. MRX.cabin),
- diese KBA.

**DT**

### Vorbereitung

MRX.mountingPlate kann für verschiedene Einsatzfälle verwendet werden. Evtl. ist es sinnvoll die Platte zuvor entlang der Hilfslinie zu halbieren.

### Montagemöglichkeiten

MRX.mountingPlate dient zur Befestigung der unterschiedlichen Gehäuse von MRX.KranFunk mittels der RAM Kugelkopffamilie „1,5 Zoll“.

Im folgenden werden die verschiedenen Montagemöglichkeiten gezeigt.




## Montage der Kugelköpfe

Es gibt 2 Arten von Kugelköpfen:

- 4-Loch Platte (2015750): montiert mit 4x M6x10
- Schraubfuß (2015710): montiert mit 1x 3/8-16 UNC Mutter.


Auf MRX.mountingPlate gibt es insgesamt 7 Positionen für die Montage von Kugelköpfen:

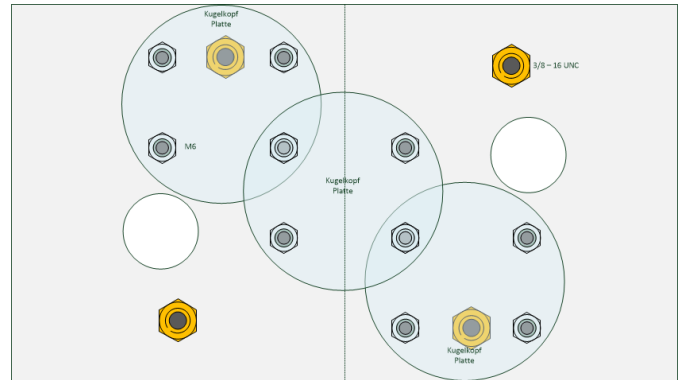

## Montage MRX.pal und MRX.OrlacoCabinAdapter

Auf MRX.mountingPlate kann entweder 1x MRX.pal oder 2x MRX.OrlacoCabinAdapter montiert werden.


Es sind jeweils 4x M4x10 nötig.

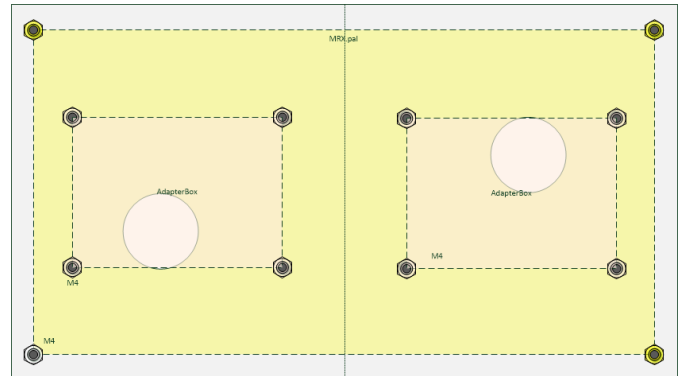

## Montage MRX.cabin und MRX.monitor

Auf MRX.mountingPlate können 2x Geräte mit VESA-Fassung montiert werden. Dies gilt für MRX.cabin und MRX.monitor.


Es sind jeweils 4x M4x10 nötig.

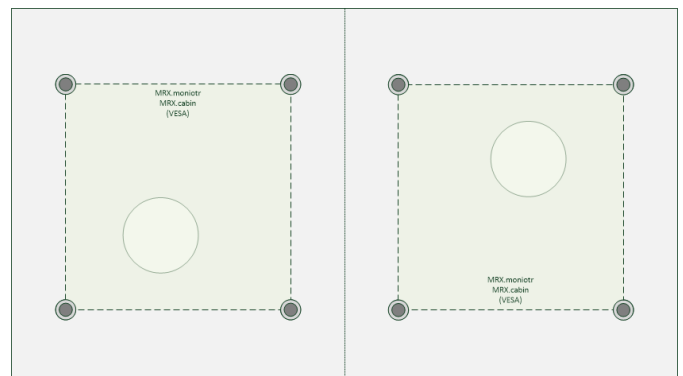

## Montage MRX.planarAntenne

Auf MRX.mountingPlate können 2x MRX.planarAntenne montiert werden.

Es sind jeweils 4x M4x10 nötig.

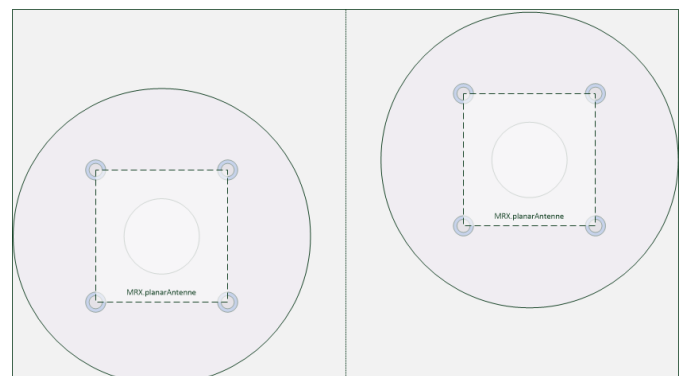

# MRX.mountingPlate **AZG Tech**

## 210192 BGR

### Quick reference guide

#### Delivery scope

The scope of delivery of the unit includes:

- MRX.mountingPlate,
- nut 3/8-16 UNC (for mounting RAM ball head with UNC thread),
- 4x lens head screw M6x10 TX, ISO7380-1, A2 (for mounting RAM ball head),
- 4x lens head screw M4x6 TX, ISO7380-1, A2 (for mounting MRX.pal or MRX.oca),
- 4x lens head screw M4x14 TX, ISO7380-1, A2 (for mounting MRX.planar antenna),
- 4x countersunk screw M4x6 TX, ISO18581, A2 (for mounting MRX.monitor or MRX.cabin),
- this QRG.

**EN**

#### Preparation

MRX.mountingPlate can be used for different applications. It may be useful to cut the plate in half along the auxiliary line beforehand.

#### Mounting options

MRX.mountingPlate is used to mount the different enclosures of MRX.CranRadio using the RAM "1.5 inch" ball head family.  
The different mounting options are shown below.




## Mounting the ball heads

There are 2 types of ball heads:

- 4-hole plate (2015750): mounted with 4x M6x10,
- Screw foot (2015710): mounted with 1x 3/8 -16 UNC nut.


On MRX.mountingPlate there are a total of 7 positions for mounting ball heads:

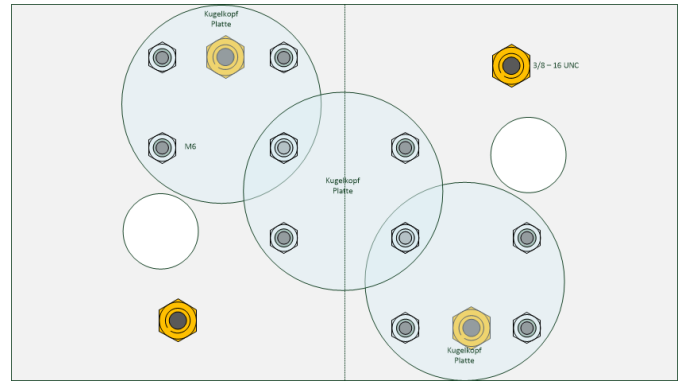

## Mounting MRX.pal and MRX.OrlacoCabinAdapter

On MRX.mountingPlate either 1x MRX.pal or 2x MRX.OrlacoCabinAdapter can be mounted.


4x M4x10 are required in each case.

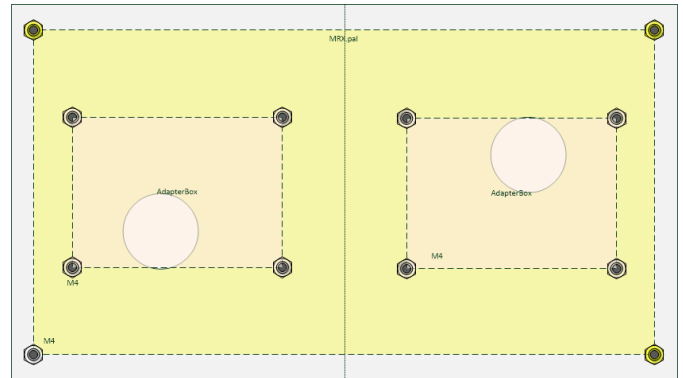

## Mounting MRX.cabin and MRX.monitor

2x units with VESA mount can be mounted on MRX.mountingPlate. This applies to MRX.cabin and MRX.monitor.

4x M4x10 are required in each case.

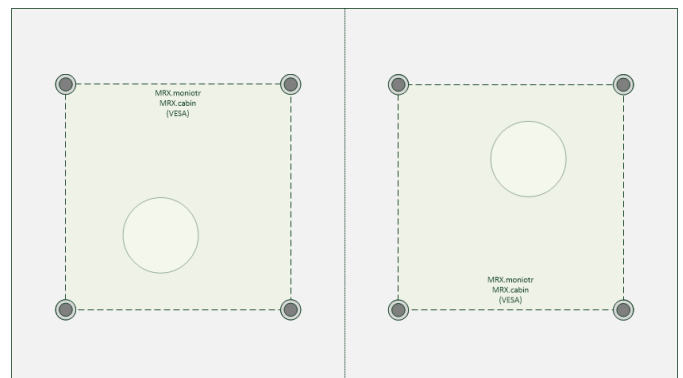

## Mounting MRX.planarAntennea

2x MRX.planarAntenna can be mounted on MRX.mountingPlate.

4x M4x10 are required in each case.

